Bellman.



BE3330
Watch Receiver

Welcome!

Make sure to read the 'Safety and Handling' section on page 27 before using the product. Scan the QR code to watch the installation video.

Wearing your watch

Wear your watch firmly and comfortably around the wrist as shown in the figure. Wearing your watch with the right fit – not too tight, not too loose and with room for your skin to breathe – will keep you comfortable and allow the watch to generate distinct vibrations.



Europe Only

Medical device information. The following applies only to users in Europe.
Intended purpose. To notify deaf and hard of hearing people of important signals.
Intended user. People over 3 years old who are deaf or hard of hearing and need audio, visual or sensory alerts.

Intended user group.
People older than 3 years.
Intended use environment. For indoor use in non-condensing environments, including temporary outdoor use.
Contraindication(s). None

Contents

2	Get to know your watch
3	Charging your watch
4	Waking up the screen
5	Setting up your watch
9	The watch face
10	The menu
11	Do not disturb
12	Using the timer
13	Managing alarms
15	Managing notifications
17	Adding and removing devices
19	Settings menu
22	Signal for attention
25	Troubleshooting

Get to know your watch

Keeps tabs on your home

This Watch Receiver is part of the alerting system from Bellman, and it will help you notice important signals in your home. So, for instance, when someone rings your doorbell, you will get a notification on your watch that you have a visitor.

Please note: The exact appearance on your watch screen will vary with territory.





How it works

When e.g. your doorbell rings, the Visit Door Transmitter is activated and signals your watch.

Your watch alerts you with vibrations and shows you what's going on.

Tailor it to your needs

The system offers a variety of setups to help you keep a watchful eye on your home and loved ones.

- Get emergency notifications from connected smoke and CO detectors.
- Use doorbell sensors to notify you if someone rings your doorbell.
- Use a baby monitor to know when your child needs your attention.
- Get an alert on your watch when you have an incoming call or message.

Charging your watch

Charge the battery before you use your watch for the first time, or when you haven't used it for an extended period.

ⓘ The first time you charge your watch; it will start automatically, and you will be asked to select language. The battery indicator will not be visible initially.

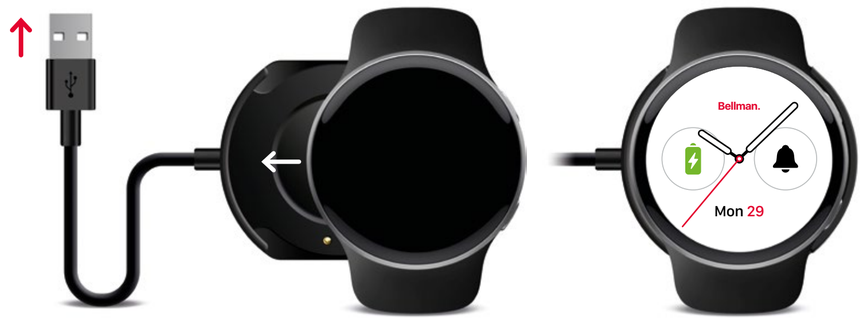

Connect to power

Connect the charging cable to an USB A power adapter or a USB A computer port.

Charge the watch

Attach your watch to the charging dock, making sure that the charging terminals • • align.

It will start automatically.

On your watch dial

The battery indicator on the watch face turns green to show that it's being charged. It can take up to 2 h to fully charge it.

Waking up the screen

Using gestures

Normally you'll leave your watch on all the time and use your wrist to wake up the screen and put it to sleep.

- To wake up the screen, raise the wrist.
  You can also press any of the side keys.
- To turn off the screen back light, lower the wrist.
  You can also press the Home key briefly.



Using the keys

If you plan not to use your watch for a while, hold down the Home key to turn your watch off to save energy. If your watch has been turned off for an extensive period, it may revert to its default time. When you charge your watch, it will need up to 30s to synchronize with the system.

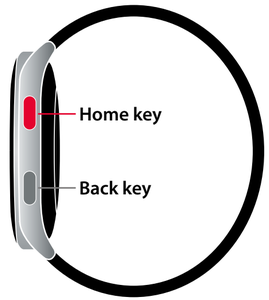

The Home key

- Press to go back to the watch face.
- Hold down to turn your watch on or off.

The Back key

- Press to open the menu or go back one step.
- Hold down for 4s to call for attention.

Setting up your watch

When you turn on the watch for the first time or reset it, follow the steps below to pair it to your system.

Before you begin, make sure the units are close to each other.

Pairing your watch



Start the bridge

Unpack the bridge and remove the battery pull tab to start it. The top LED will start to pulsate slowly in blue.

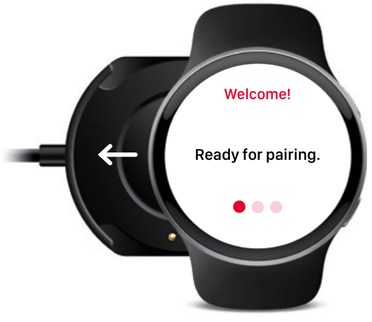

Charge your watch

Unpack your watch and place it in the charger for 15 min. Remove it from the charger, select your language and your watch is ready for pairing.



Pair your watch

Hold down the bridge ***top*** test button marked ᛒ until the LEDs start to blink alternately. Your watch will let you know when it has been added to the system. Tap **OK**.

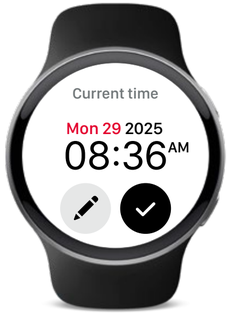

Showing the current time

If you are using the Assistant* app, the system time is shown. Tap **Edit** to fine tune the time manually or tap **Done** to complete the installation.

* See page 8

Setting the time manually

If you are not using the **Assistant app**, you will be asked to set the time and date manually.

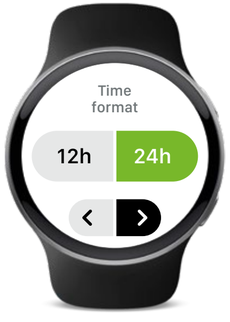

Select time format

Select between 12-hour and 24-hour time format and tap **Next** to set the time.



Set the time

Select the hours or minutes and tap the red arrows to adjust the time. Tap **Next** to set the year.



Set the year

Tap the red arrows to set the year and tap **Next** to set the date.

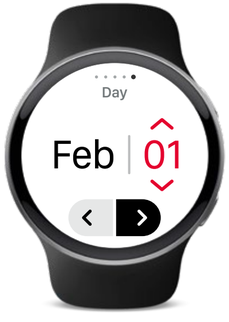

Set the date

Select the month or day and tap the red arrows to set the date. Tap **Next** to complete the installation.

Testing the connection

Make sure to test the connection after you have completed the installation, or when you haven't used your system for an extended period.

If the connection fails, go to the 'Troubleshooting' section for guidance.

To your watch and mobile phone



On your bridge

Press the ***top*** test button marked . The top LED lights up in blue to show that a signal is being transmitted.



On your watch and mobile

A message appears on your watch and mobile phone to confirm that the units are connected to your bridge.

To your Visit system



On your bridge

Press the ***bottom*** test button marked . The bottom LED lights up in green to show that a signal is being transmitted.



On your receiver

The yellow LED lights up and it starts to sound, flash or vibrate depending on your type of receiver.

The Assistant app

We recommend installing the Bellman Assistant app. It enables seamless communication between your legacy Visit system and your mobile phone, making it easier than ever to stay connected to your home.

Once the app is installed, you will begin receiving Visit notifications on your mobile phone. In addition, your Visit receivers can alert you to incoming calls and messages.

Easy synchronization

Another benefit is that your Watch Receiver automatically synchronizes the time and date with your mobile phone, eliminating the need to set the time, time zone or date manually.

The Bellman Assistant app is free of charge and available for both iOS and Android devices.

Install the Assistant app

Bellman.

Download the **Assistant** app from the App Store® or Google Play™ and follow the simple setup instructions.



Clear notifications

Enjoy clear and distinct notifications on your mobile phone, tablet and even your smart watch.

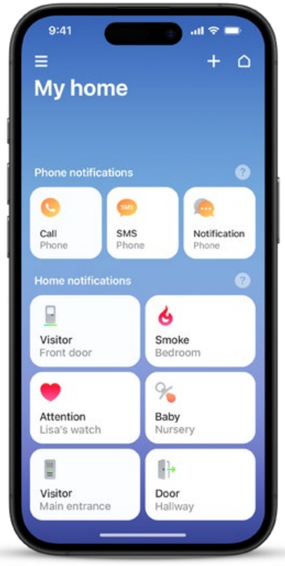

Easy to use

The home screen provides an overview of notifications, to and from your phone. Tap one to temporarily turn it off.

The watch face

Your watch receiver offers a selection of watch faces to choose from. No matter what design you choose, the watch will feature three complications: Date, Battery status and Notification history.

But if the watch is out-of-range or if the notifications are turned off, red symbols will temporarily take their place to notify you.

Overview

Date
Displays the day and date.

Battery status
Indicates the current battery level.

Notification history
Shows the number of missed notifications.

Out-of-range
Warns when your watch is out-of-range.

Do Not Disturb
Means that the notifications are turned off.

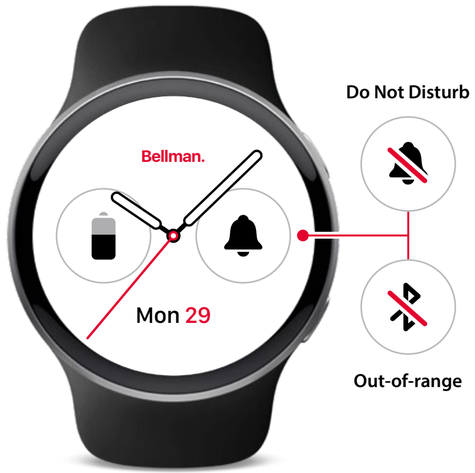

The menu

In the menu you have access to a multitude of useful features like for instance, a timer and an alarm clock. Here, you can also fine tune your watch to match your needs.

To open the menu, press the **Back key** on the right side of the watch.

Overview

	Page
Do Not Disturb Find out how to turn off a notification temporarily.	11
Timer Get to know the powerful timer function.	12
Alarm Learn how you turn your watch into an alarm clock.	13
Night Mode Discover how to reduce eye strain during the night.	15
Settings Tailor your watch to fit your needs.	19



Back key
Press the Back key to return to the watch face.

Do Not Disturb

This function will temporarily silence the notifications on your watch. Just pick a preset like e.g. 10, 20, or 30 minutes to activate it. Please note that fire and CO notifications cannot be silenced for security reasons.

To open the Do Not Disturb panel, press the **Back key** and tap **Do Not Disturb** in the menu.



In the Do Not Disturb panel

Tap to pick a preset duration, like for instance 10, 20 or 30 minutes.

On your watch dial

The Do Not Disturb symbol shows that it is activated.

Tap the symbol to turn the notifications on again.

When the time is up

The Notifications symbol re-appears to show that the notifications are turned back on.

Using the timer

The timer can help you keep track of time. You can create a custom timer or select a preset like e.g. 5, 10 or 15 minutes. If you pick a preset, the timer will start right away.

To open the Timer panel, press the **Back key** and tap **Timer** in the menu.



In the Timer panel

Pick a preset timer, displayed in minutes, or tap **Add** to create a custom timer.

Set the timer duration

Tap to select the hours or minutes and tap the arrows to adjust the time. Tap **Start** to activate the timer.

On your watch dial

The **Timer** shows the remaining time.

Tap the timer symbol to pause, resume or delete it.

When the time is up

- Tap to restart the timer.
- Tap to delete the timer and return to the watch face.

Managing the alarm

This section describes how to set, snooze, and turn an alarm On/Off. To open the Alarm panel, press the **Back key** and tap **Alarm** in the menu.

Setting an alarm

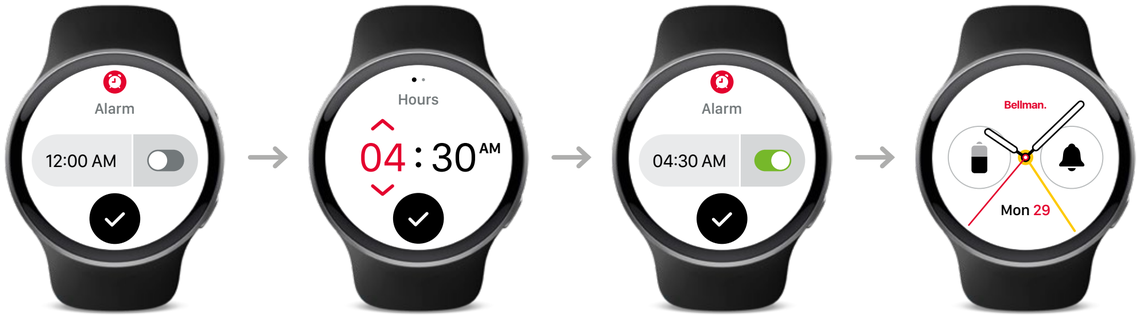

In the Alarm panel

– Use the switch to turn the alarm On/Off.

– Tap the alarm time 12:00 AM to edit the alarm.

To adjust the alarm

Tap to select the hours or minutes and tap the red arrows to adjust the time. Tap Done to go to the Alarm panel.

In the Alarm panel

Your new alarm is turned On automatically.

Tap Done to save the alarm and go to the watch face.

On your watch face

The alarm hand is shown on the watch face (here in yellow).

Use the switch in the Alarm panel to turn it On/Off.

Snoozing or stopping



When the alarm goes off

– Tap Zz to snooze the alarm for 9 minutes.

– Tap ✕ to stop the alarm and return to the watch face.

When you are snoozing

A window appears briefly on your watch face to confirm your choice.

Turning the alarm On/Off

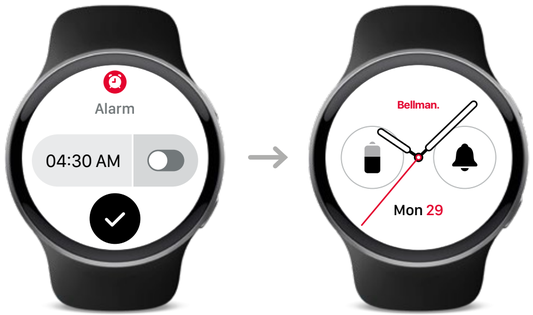

In the Alarm panel

– Tap the switch to turn off the alarm.

– Tap Done to save your setting and go to the watch face.

On your watch face

The alarm indicator has disappeared from your watch face.

Using Night Mode

Night Mode reduces eye strain and glare, making it easier to focus on the text in low-light environments.

To activate Night Mode, press the **Back key** and tap **Night Mode** in the Menu.



To activate Night Mode

Tap to select **Night Mode** in the Menu to activate it.

Your watch will feature a dark and dimmed watch face.



To deactivate Night Mode

Press the **Back key** to deactivate Night Mode. The watch will return to your original screen settings and open the menu.

Managing notifications

When a Visit Transmitter or the mobile app is activated, it signals your watch that alerts you with vibrations and displays a message. Your transmitter setup decides what type of notifications you will receive.



Notification example

When e.g. the mobile phone rings, your bridge is activated and signals your watch.



On your watch face

Your watch alerts you with gentle vibrations and displays a message. Press the **Home key**, **Back key** or tap the screen to silence it.

Notification history

To get an overview of your recent notifications, tap the notifications icon on the watch face. Your notifications are sorted by date and time, and you can go back 6 notifications to see what has happened.



On your watch face

The 3 on the dial shows the number of missed notifications.

Tap the notifications icon to view the history list.



Viewing the history

Tap the top and bottom arrows to view your recent notifications.

The notifications are listed in chronological order.

Turning off a notification

Do you sometimes feel overwhelmed by too many notifications? Tap a notification to turn it off temporarily.

First, press the Back key to open the menu. Then select **Settings** and tap **Notifications** to open the panel.

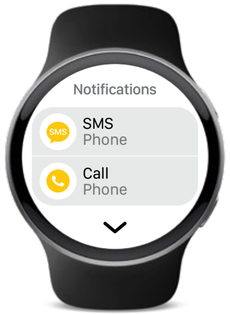

In the Notifications panel

Tap the top and bottom arrows to find the notification you want to turn off.

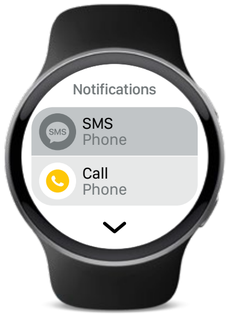

To turn off a notification

Tap the notification you want to turn off. It will be grayed out. Tap it again to turn it back on.

Adding a transmitter

When you add a transmitter to your system, the associated notification will automatically be added to the Notifications panel.

Learn more
Read the transmitter's user manual to learn how to add it to your system.



To add a device:

Push the **Test buttons** on the transmitter you want to add.

In this example we are adding a Visit Baby Monitor.



On your watch face

Your watch starts to vibrate, and the associated notification appears on your watch face.



To acknowledge

Press the **Home key**, **Back key** or tap the screen to silence it.

Your watch will return to the watch face.



In the Notifications panel

The first time you activate a transmitter, the associated notification will be added automatically.

Removing a notification

When you remove a transmitter from your system, it's a good idea to remove the associated notification from the Notifications panel.

So for instance, if you remove a Baby Monitor, you might want to remove the Baby notification in the list too.



To remove a notification

Press the **Back key** to open the Menu and tap Settings.



In the Settings menu

Tap **Notifications** to open the Notifications panel.



In the Notifications panel

Tap the top and bottom arrows to find the notification you want to remove.



To remove the notification

Hold down the notification to remove it. A bin will appear. Tap the bin to confirm.

Settings menu

In the Settings panel you can adjust a multitude of parameters to make your Watch Receiver match your specific needs.

To open the Settings screen, press the **Back key** to open the Menu and tap **Settings**.

Overview

Screen 1

Time and date
Set the time, date and year manually.

Notifications
Browse the list and turn off notifications temporarily.

Watch faces
Select the watch face that matches your style.

Screen brightness
Adjust the light intensity in 5 steps.

Next
Tap the symbol to access more parameters.



Home key
Press the Home key to go back to the watch face.

Back key
Press the Back key to go back to the Menu.

Overview

Screen 2

Alert timeout
Controls the duration of your vibrating alerts.

Safe Mode
Restricts access to advanced features.

Screen wake-up
Controls how you wake your watch display.

About the watch
Shows the device ID, version information etc.

Back
Tap the symbol to go back to the first screen.

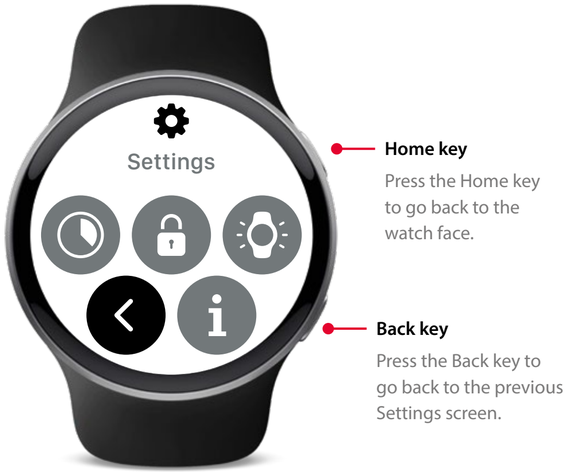

Home key
Press the Home key to go back to the watch face.

Back key
Press the Back key to go back to the previous Settings screen.

Settings

This section describes the various Settings parameters and how to adjust them to fit your preferences.
Please note: Changing the Alarm timeout will not have any effect on safety critical notifications.

To open the Settings screen, press the **Back key** to open the menu and tap **Settings**.

Setting the date and time



On the Settings screen

Tap the symbol to select the parameter you want to edit or tap Next to go to the following Settings screen.



To set the date and time

Tap to select **Date and time**. Select the hours or minutes and tap the red arrows to adjust the time. Tap Next to set the year.



Set the year

Tap the red arrows to set the year and tap Next to set the date.

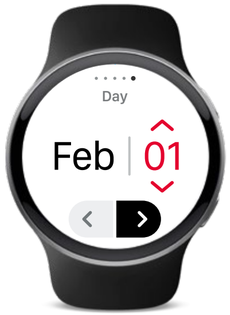

Set the date

Select the month or day and tap the red arrows to set the date. Tap Next to finish.

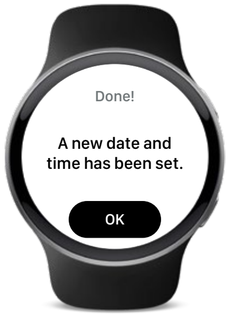

Done!

A screen appears to confirm that a new date and time has been set. Tap **OK** to return to the Settings screen.

Brightness



To adjust the brightness

Select **Brightness** on the Settings screen.

Use the buttons to adjust the brightness and tap Done.

Alert timeout

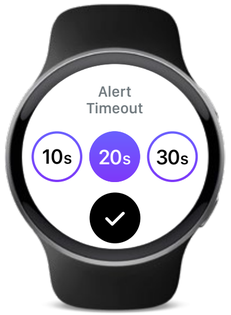

To adjust the alert timeout

Select **Alert Timeout** on the Settings Screen.

Choose between 10, 20 and 30 seconds and tap Done.

Screen wake-up



To turn on Screen wake-up

Select **Screen Wake-Up** on the Settings screen.

Use the switch to turn it On/Off and tap Done.

Settings

Do you prefer a watch that only alerts you to important signals, and don't care much about other features? Turn on Safe Mode and your watch will be even easier to handle. To open the Settings screen, press the **Back key** to open the Menu and tap **Settings**.

Using Safe Mode

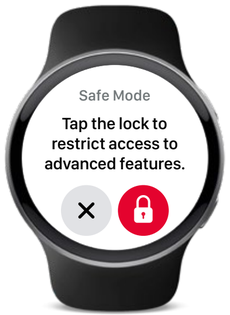

To activate Safe Mode

Select **Safe Mode** on the Settings screen and tap the lock to activate it.

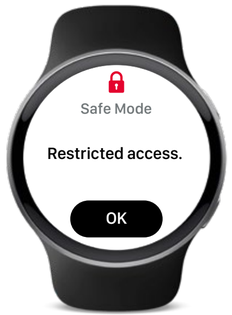

Safe Mode dialog

When Safe Mode is on, a dialog appears if you try to access advanced features.



To deactivate Safe Mode

Hold down the Home key while pressing the Back key five times. Tap **OK** to return to the watch face.

Factory reset



To return to factory settings

Hold down both keys for 7s to initiate a factory reset. Tap **YES** to confirm. The current pairing data will also be removed.

Signaling for attention

To signal for attention, hold down the **Back key** for about 4 seconds. The Visit receivers around your home will sound, flash or vibrate to notify your family members.

Please note: The first time you signal for attention, the app will only add it to its Notifications list. Send the notification once more to ensure the signal is received on all devices.



To signal for attention:

Hold down the **Back key** for 4 seconds to signal for attention.



During the countdown

Tap **Stop** or press any key before the countdown has reached 1 to cancel and return to the watch face.

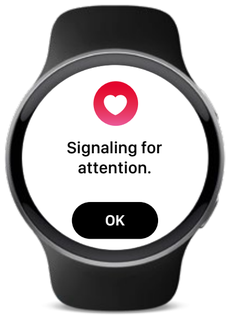

Signaling for attention

Tap **OK** to acknowledge and return to the watch face.

If you don't tap OK, it will return to the watch face after 30s.

About the watch

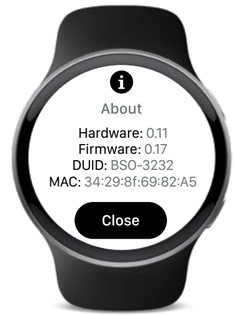

To open the About panel

Select **About** on the settings screen to open the About panel. Tap **Close** to return to the Settings screen.

Customizing the watch face

You can customize the watch face to suit your various styles. Do you want a numeric or a minimalistic look? The watch offers a selection of designs to choose from.

To open the Settings screen, press the **Back key** to open the Menu and tap **Settings** .



To change the watch face

Select **Watch Face** on the Settings screen. The current watch face is fronted in the gallery.

Find the watch face you like

Use the left ❮ and right ❯ arrows to toggle between the available watch faces.

Select dark or light version

Use the switch to toggle between the dark and light version of the watch face.

Tap the watch face to select it.

Showing the new face

The selected watch face is now featured on your home screen.

Changing the band

Your watch can be fitted with virtually any band that features a lug width of 20 mm. Use the method below to attach a new band.

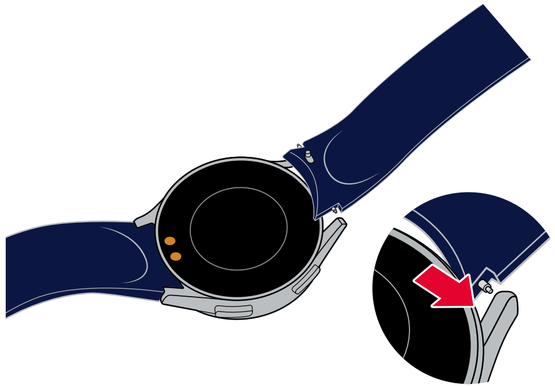

Connect the spring bar

Insert one end of the band's spring bar into the watch's lug.

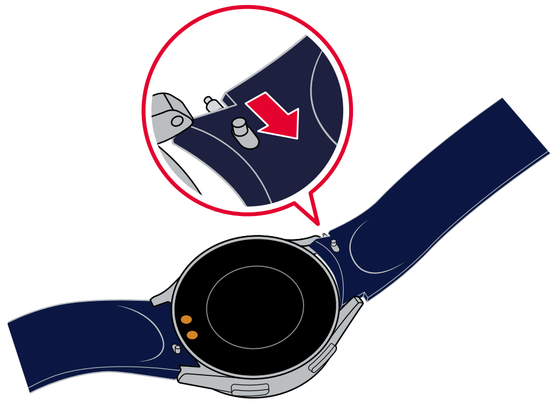

Connect the other end

Slide the spring bar inwards and connect the band.

Available watch faces

Minimalistic
Light



Classic
Light



Numeric
Light



Dressy
Light



Chronograph
Light



Diver
Light



Minimalistic
Dark



Classic
Dark



Numeric
Dark



Dressy
Dark



Chronograph
Dark



Diver
Dark



Troubleshooting

If you encounter any problem with your Watch Receiver, please try the following suggestions.

If	Try this
An Out-of-range symbol appears on the watch face.	The symbol warns that your watch is temporarily out-of-range and that you will not receive any notifications. Move to an area that is closer to your notification system.
A Do Not Disturb symbol appears on the watch face.	This symbol means that your notifications are temporarily silenced. Tap the symbol to turn the notifications back on. Please note that critical notifications like e.g. smoke and CO cannot be turned off.
The watch does not turn on	The battery on your watch is depleted. Attach your watch to the charging dock to charge the battery, see 'Charging your watch'. It can take up to 2 hours to fully charge the watch.
The touchscreen responds slowly or improperly	▪ Make sure you are not wearing gloves, and that your hands are clean. ▪ Make sure you are not using any sharp objects or only touching the screen with your fingernails. ▪ Please note that humid conditions or exposure to water may prevent the touchscreen from function properly. If you have very dry skin, try to use some skin lotion to improve the touch response. ▪ Ensure that your watch software is updated to the latest version. ▪ If the screen is scratched or damaged, contact an authorized service center for assistance.
The watch is frozen and unresponsive	▪ Disconnect your watch from the charger and let the battery run out until it's completely dead. ▪ Reconnect your watch to the charger and wait for at least 30 minutes. ▪ Press and hold the Home key to start your watch. ▪ If the problem persists, contact an authorized service center for assistance.
I was not able to add a device	▪ Bring your watch close to the bridge and make sure the watch is turned on. ▪ Press the top Test button on the bridge to make sure the connection is not lost. Bring the device you want to add nearby, make sure it's turned on, and try to connect it again, see 'Adding a device'.

If	Try this
The watch is vibrating for no apparent reason	There is probably another Bellman alerting system installed nearby that triggers your system. Change the radio key on all units, see 'Changing the radio key' in the Bridge Transceiver user manual.
The watch does not vibrate or light up a symbol when a transmitter is activated.	▪ If an Out-of-range symbol blinks on the watch face, move to an area that is closer to your Bellman system. Obstacles, such as walls or electrical equipment close to the devices can reduce the Bluetooth coverage area significantly. Examples of electrical equipment includes, but is not limited to, microwave ovens, Wi-Fi routers and plasma TV screens. If the problem remains, make sure that the bridge is connected to power, and that the backup batteries are fresh. To test the connection, press the top Test button on the bridge. A message will appear on your watch to confirm that the connection is OK. ▪ If no Out-of-range symbol appears on your watch face, there are two possibilities: **1** The connection between the transmitter and the bridge is lost. Move the units closer together. To test the connection, press the Test button(s) on the transmitter. If the bottom LED on the Bridge lights up in green, the connection between the transmitter and the bridge is OK. **2** The transmitter doesn't trigger correctly. Check all connections to the transmitter, and make sure that the batteries are not depleted.
The watch is hot to the touch	▪ This is normal and should not affect your watch's lifespan or performance. If your watch overheats or feels hot for a prolonged period, do not use it for a while. ▪ If your watch continues to overheat, contact an authorized service center for assistance.
The watch battery doesn't charge properly	▪ Make sure that the charging dock is connected to power and that you have attached your watch to the charging dock correctly, see 'Charging your watch'. ▪ A charging symbol appears, and short vibration occurs to confirm that charging has started. If the display is turned off, press any key to check the charging status.

Safety and handling

⚠ Hazard warnings

- Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the device or other property.
- The signal-for-attention function shall only be used to simplify the contact with people at home, it is not to be used as a personal alarm.
- Keep the device and its accessories out of the reach of small children.
- Be aware that alarms and notifications can be missed if batteries run out.
- This device should not be used as the only means of security in life threatening situations.
- This product is equipped with a USB cable for connecting to a desktop or notebook computer or to the charger. Be sure your computer is properly grounded before connecting your product to the computer, and that the outlet is installed and grounded in accordance with all local codes and ordinances.
- Do not subject the device to strong heat sources such as naked flames, radiators, ovens or other devices that produce heat.
- Do not modify this equipment without authorization from the manufacturer. Do not dismantle the device or insert foreign objects into it. There is a risk of electric shock, and tampering with the device will void guarantee.
- Protect the device from shocks during storage and transport.
- Do not make any changes or modifications to this device. Use only original Bellman accessories to avoid any electrical shock.
- Use only original Bellman accessories.
- The device may only be repaired by an authorized service center.

ⓘ Information on product safety

- Failure to follow these instructions could result in damage to the device and void the guarantee.
- Prevent the charger port and the small end of the charger cable from coming into contact with conductive materials, such as liquids, dust, metal powders, and pencil leads.
- While charging, the device and the charger may become hot. This does not affect the device's lifespan or performance and is in the device's normal range of operation.
- Don't use excessive force or a metallic object on the touchscreen. It may damage the tempered glass surface and void the guarantee.
- Do not allow the touchscreen to come into contact with other electronic devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not drop your device. Dropping onto a hard surface can damage it.
- Do not insert foreign objects into the product.
- Do not place the product in a microwave oven.
- Do not use the device in areas where electronic equipment is prohibited.
- No company, enterprise or user is allowed to change the frequency, enhance the transmitting power or alter the original characteristics or performance on an approved low power radio frequency device.
- This device should not be used on aircrafts unless specifically permitted by flight personnel.

Medical device Interference

⚠ Persons with pacemakers should:

- ALWAYS keep the product more than six (6) inches from their pacemaker when the product is turned ON.
- Not carry the product in a breast pocket.
- Use the wrist opposite the pacemaker to minimize the potential for RF interference.
- Turn the product OFF immediately if there is any indication that interference is taking place.
- If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from external RF energy.

⚠ Battery warnings

- Keep batteries out of reach of pets and children under three years. If batteries are swallowed, consult your physician immediately! Do not disassemble, open, crush, bend, deform, puncture or shred.
- Keep batteries out of reach of pets and children under three years. If batteries are swallowed, consult your physician immediately!
- Li-Ion battery is a hazardous component which can cause injury.
- Do not attempt to replace, modify or deform the battery. The battery may only be replaced by an authorized service center.
- Do not expose battery to any liquids or fire.
- Only use the battery for the system for which it is specified.

Product disposal and recycling information

According to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The recycling of your product will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Battery disposal information

This product contains batteries that according to local laws and regulations must be disposed of separately from household waste. Take used batteries to a collection point designated by the authorities.

Notes on water resistance

This product is water- and dust-resistant according to IP67 rating, but resistance will decrease over time due to normal wear. Dropping the product may cause resistance to decrease further. Do not use the product under following condition:


Do not immerse the product in liquids other than water, such as soap or cleaning agents.


Do not immerse the product in salt water, such as sea water.


Do not immerse it in hot spring or wear it when you take hot showers.


Do not swim wearing this product or use it under water.


Do not expose the product to extensive heat like e.g. in a hot car.


Do not place the product directly on sand or mud, such as at the beach.

Liquid damage is not covered under guarantee, but you might have rights under consumer law.

Advice on how to avoid skin irritation

When you wear the watch for a long time, skin irritation may occur due to certain factors, such as friction, pressure, or moisture. If you have been wearing your watch for a long time, remove it from your wrist for a while to keep your skin healthy and allow your wrist to rest.

Skin irritation may occur due to an allergy, environment factors, other factors, or when your skin is exposed to soap or sweat for long periods. In this case, stop using your watch immediately and wait 2 or 3 days for the symptoms to ease. If the symptoms persist or worsen, call your doctor.

Make sure your skin is dry before wearing your watch. If you wear a wet watch for a long time, your skin may be affected.

General guidelines

While using your product, be aware of the following common sense guidelines:

- Use and store your product in temperatures between 0° to 35° C, 32° to 95° F. Exposing your product to extremely low or high temperatures may result in damage, malfunction or even explosion.
- When powering on unit in recommended operating conditions from storage environment the device will reach its operational state within 30 seconds
- Using a mobile device or accessory while driving may cause distraction. Please keep your eyes on the road.
- Always follow any special regulations in a given area. Turn your device off in areas where use is forbidden or when it may cause interference or danger.
- If a serious incident occurs in relation to this device, contact the manufacturer and relevant authority.
- If you encounter other problems with your device, contact the point of purchase, your local Bellman & Symfon office or the manufacturer. Visit bellman.com for contact info.
- This device should not be used on aircrafts unless specifically permitted by flight personnel.

Maintenance and guarantee

This section contains information about maintenance, service and guarantee conditions.

Cleaning

Wipe your Watch Receiver clean with a nonabrasive, lint-free cloth. If necessary, lightly dampen the cloth with fresh water. If your Bellman Watch has substances or debris visible in places such as the ports, you can hold your Bellman Watch under lightly running, warm, fresh water until it's clean. This device does not require sterilization.

Service and support

If the device appears to be damaged or doesn't function properly, follow the instructions in the user guide and this leaflet. If the product still doesn't function as intended, contact an authorized service center for information on service and guarantee.

Guarantee conditions

Bellman & Symfon guarantees this product for two (2) years from date of purchase against any defects that are due to faulty materials or workmanship. This guarantee only applies to normal conditions of use and service, and does not include damage resulting from accident, neglect, misuse, unauthorized dismantling, or contamination howsoever caused. This guarantee excludes incidental and consequential damage. Furthermore, the guarantee does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. This guarantee gives you specific legal rights and you may also have other rights that vary with territory. Some countries or jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitations on how long an implied guarantee lasts, so the above limitation may not apply to you. This guarantee is in addition to your statutory rights as a consumer. The above guarantee may not be altered except in writing signed by both parties hereto.

Technical specifications

- Dimensions: 49.5 x 44.5 x 9.3 mm, Weight: 42g, 1.5 oz
- Screen Size: 1.3" TFT full touch screen
- Screen Resolution: 240x240px
- Battery Power: 180mAh
- Operating time: Up to 1 week depending on use
- Material: BS + PC (watch), Silicone (wrist band)
- Waterproof: IP67
- Charger: USB charge cable (5V, 1.0 A)
- Bluetooth frequency: 2400–2483.5 MHz
- Max transmission power: 3 mW
- Coverage: Up to 250 m open range
- Expected service life: 5(five) years
- Operating temperature: 0° to 35° C, 32° to 95° F.
- Transport and storage temperature: -10° to 50° C, 14° to 122° F
- Humidity: 15% – 90%, non condensing

In the box

- BE3330 Watch Receiver
- BE9419 Wrist band, black
- BE9295 Pocket charger
- Quick Guide

Symbol explanation

MD	Indicates the item is a medical device.
UDI	Indicates a carrier that contains unique device identifier information.
	Indicates that the product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling.
SN	Indicates the manufacturer's serial number so that a specific device can be identified.
REF	Indicates the manufacturer's catalogue number so that the device can be identified.
	Indicates the device manufacturer.
	Indicates the need for the user to consult the instructions for use.
	Indicates that caution is necessary when operating the device or control close to where the symbol is placed, or that the current situation needs operator awareness or operator action in order to avoid undesirable consequences.
	Identifies a place where information may be found, especially in an emergency.
	Indicates the temperature limits to which the device can be safely exposed.
	Indicates the range of humidity to which the device can be safely exposed.

FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by Bellman & Symfon Group AB could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC compliance statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur-récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) L' appareil ne doit pas produire de brouillage; (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

FCC ID: 2APAKBE3330

IC: 66693A-BE3330

CMIIT ID: 25J999HCC636

GB 4943.1-2022

GB 17625.1-2022

GB/T 9254.1-2021

UKRP

Bellman & Symfon UK Limited
The Tack Room, Rectory Farm
Offices, Warmington,
Peterborough, PE8 6UT, UK

CH REP

Audiocare AG
Eichenweg 1, CH-4410 Liestal
Switzerland

Manufacturer

Bellman & Symfon Group AB
Södra Långebergsgatan 30
436 32 Askim
Sweden
Phone: +46 31 68 28 20
E-mail: info@bellman.com

© and TM 2026 Bellman & Symfon AB. All rights reserved.

Revision: BE3330_032MAN3.0
Date of issue: 2026-05-21
TM and © 2026 Bellman & Symfon Group AB.
All rights reserved.