

Maxi Pro TV streamer

BE2022



Features

Bluetooth powered

Streams the sound using Qualcomm® aptX™ LL technology

Multiple ports

Connects to the vast majority of modern television sets



Qualcomm® aptX™
low latency



Listen at your own volume.

The Maxi Pro TV streamer enables you to hear the television at a volume that suits you, without affecting the volume for anyone else in the room. It streams the sound in full HD-stereo via Bluetooth to your Maxi Pro Personal Amplifier.

The Maxi Pro TV streamer uses the latest Qualcomm® aptX™ low latency technology which results in optimum time synchronization when playing back audio, rendering crisp and clear sound without any lip sync issues. The TV streamer features both analogue and digital input and connects to the vast majority of modern television sets.



Technical specifications





Dimensions and weight

Height: 24 mm, 0.9"
Width: 88 mm, 3.5"

Depth: 48 mm, 1.9"
Weight: 70 g, 2.5 oz.



Buttons and controls

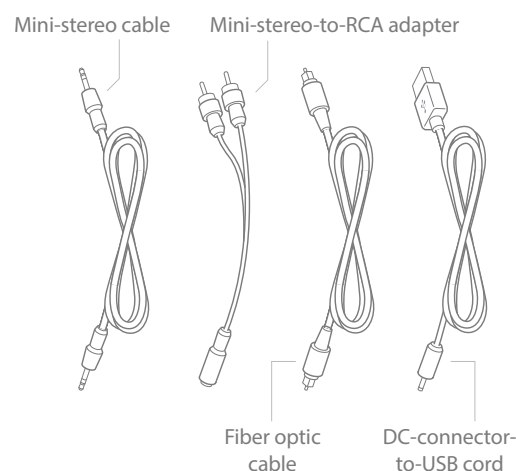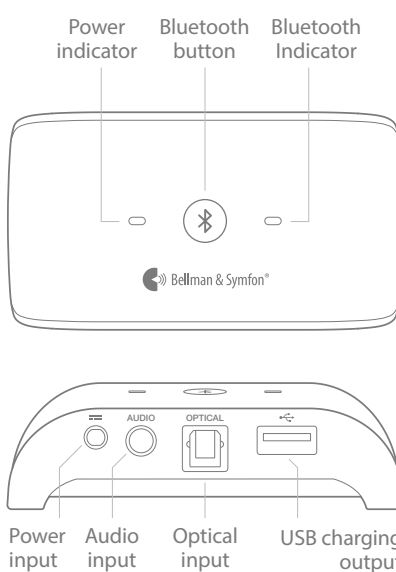

Features

- Uses Qualcomm® aptX™ low latency streaming technology which results in optimum time synchronization when playing back audio, rendering crisp and clear sound without any lip sync issues.
- Multiple ports
Features both analog and digital input and connects to the vast majority of television sets.

Connections

- Audio input: 3.5 mm mini-stereo
- Audio input sensitivity @ max 2Vrms: +6 dBV
- Optical input: 44.1KHz, 48KHz
- Optical input sensitivity: 0 dBFS
- Charger input: 2.5 mm connector
Output: DC 5V, 1.0A
- Charging output: USB type A

Maintenance and cleaning

- To clean the product, unplug the power cord and all cables. Then use a soft, lint-free cloth. Avoid getting moisture in openings.
- Don't use window- or household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.

Power

- Power consumption: 31 mA

Frequency and coverage

- Bluetooth frequency
2402 – 2480 MHz
- Coverage
Up to 25 m, 27.5 yd, free field
- Connectivity
Qualcomm® aptX™ LL

Environmental requirements

- Operating temperature
0° to 35° C, 32° to 95° F
- Relative humidity
15% to 90% (non condensing)

Accessories

- BE2021-C / BE2021
Maxi Pro Personal Amplifier
- Power adapter, white
- Power adapter plug, white

In the box

- BE2022 Maxi Pro TV Streamer
- BE9123 Audio Cable kit Maxi Pro TV Streamer
- BE9228 Fiber optic cable, white
- BE9254 Charge cable USB, white



Compliance

This product is CE marked and complies with applicable EU directives and regulations.

This product complies with applicable FCC, ICES Canada and RCM AUS+NZ regulations.

本機器は日本の電波法に適合しています。

© and TM 2025, Bellman & Symfon AB

Bellman and Bellman & Symfon are registered trademarks owned by Bellman & Symfon Group AB, all rights reserved. All product designs are patented. This leaflet is subject to change without prior notice.

BE2022_035DSH2.0_EN

bellman.com